

In older Avant 200 series there was not any good advice for towing, it was just to drag the loader with its tyres to some safe place for repair, or lift it up to some trailer and transport. In reality also the Bondioli & Pavesi NT12 pump, there is a needle valve to release the pump, but the access to it is next to impossible because of the construction. I do not recommend that.

Avant 200 series 2, have a towing position at the hydrostatic pump, please see the photos. Just be really careful when using this opportunity, it can be a **big hazard** if the surface where you operate is declined. The wheels are really free to rotate whenever the towing position has been selected ! Then the loader can escape easily.


A427753 VARIABLE DISPLACEMENT
HYDROSTATIC PUMP, AVANT 200 serie 2



A427753 VARIABLE DISPLACEMENT
HYDROSTATIC PUMP, AVANT 200 serie 2



A427753 VARIABLE DISPLACEMENT
HYDROSTATIC PUMP, AVANT 200 serie 2

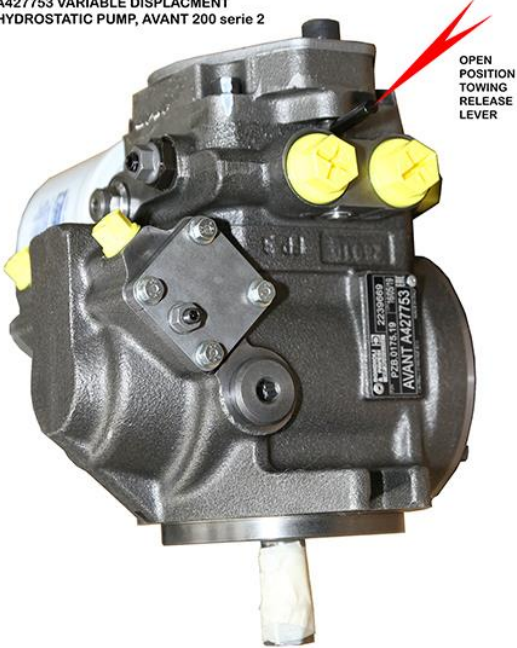

OPEN
POSITION
TOWING
RELEASE
LEVER

